

PE175BFA

CERMAX® XENON SHORT-ARC LAMPS



Cermax[®] Xenon short-arc lamps from Excelitas Technologies are ideal for applications that require a high degree of illumination control.

The Cermax® Xenon short-arc lamp from Excelitas Technologies is an innovative lamp design in the specialty lighting industry. Cermax® Xenon lamps were first introduced in the early 1980s and are now used in diagnostic and surgical endoscopes in most major hospitals worldwide, in high-brightness projection display systems, and for a wide variety of other high-performance applications.

The Cermax® Xenon lamp, Model PE175BFA, has an integrated parabolic reflector, enabling high-intensity, focused output of visible and infrared radiation. With their internal reflector and rugged ceramic body construction, Cermax® Xenon lamps are the safest and most compact alternative to conventional quartz xenon lamps. This makes them ideal for applications that require a high degree of illumination control.

Current-regulated or power-regulated power supplies with output ripples of less than 5% are recommended. Single-shot ignition pulses are advised because radio frequency starters may damage the lamp's internal reflector.

In addition to lamps, Excelitas Technologies manufactures Cermax® Xenon short-arc lamp power supplies, lamp holders, OEM lighting systems, and fiber optic light sources.



Key Features

- High-intensity illumination—2200 Lumens
- Power range of 150-200 Watts
- 1000 hours life
- Broad spectral range with 5900°
 Kelvin color temperature
- Made in the U.S.A.

Applications

- Medical and industrial fiber optic illuminators
- Machine vision
- Infrared and visible spotlights/beacons
- Spectroscopy
- Microscopy
- UV Curing
- Video projection
- Solar simulation
- Wafer Inspection



PE175BFA

CERMAX® XENON SHORT-ARC LAMPS

PE175BFA

Operational Specifications				
Description	Nominal	Range		
Power	175 Watts	150-200 Watts		
Current	14 amps (DC)	12-16 amps (DC)		
Operating Voltage	12.5 volts (DC)	11-14 volts (DC)		
Ignition Voltage	23-35 kilovolts (system dependent)			
Temperature	150° C (Maximum)			
Lifetime*	1000 hours typical			

^{*} End of life is defined as 50% of initial output

Initial Output at Nominal Power F= UV Filtered Output		
Peak Intensity	350x10 ³ Candelas	
Radiant Output*	25 Watts	
UV Output*	1.2 Watts	
IR Output*	14 Watts	
Visible Output*	2200 Lumens	
Color Temperature	5900° Kelvin	
Peak Instabilities	4%	
Beam Geometry**	5°/6°/7°	

^{*} These values indicate total output in all directions. Wavelengths = UV<390 nm, IR>770 nm, Visible: 390 nm-770 nm

^{**} Beam Geometry defined as the half angle at 10% PTS after 0/100/1000 hours

Physical Specifications		
Description	Specification	
Weight	131 grams	
Window Diameter	1.0 inch (25.4 mm)	
Country of Origin	United States of America	

www.excelitas.com PE175BFA 03/2012 page 2 of 4

CERMAX® XENON SHORT-ARC LAMPS

PE175BF


Focused Output with a f/1.0 Lens			
Description	Visible Output	Total Output*	
3 mm aperture	830 Lumens	8 Watts	
6 mm aperture	1400 Lumens	13 Watts	

^{*} Nominal values at 175 Watts after 2 hour burn-in.

NOTES:


- 1. Lamp must not be operated with window facing upwards within 45° of vertical.
- 2. Seal temperature must not exceed 150° C.
- 3. Current/power regulated power supplies and Excelitas lamp housing units are recommended.
- **4.** Lamp must be operated within recommended current and power range. Over powering may lead to arc instability, hard starting and premature aging.
- 5. Hot mirror assembly is available for IR filtering.
- **6.** Cermax® Xenon lamps are much safer lamps to use than their quartz xenon arc lamp equivalents. However, caution must be practiced when operating lamps because they are under high pressure, require high voltage, reach temperatures up to 200° C, and their IR and UV radiation can cause skin burns and eye damage. Please read the Hazard Sheet included with each lamp shipment.

Mechanical Dimensions

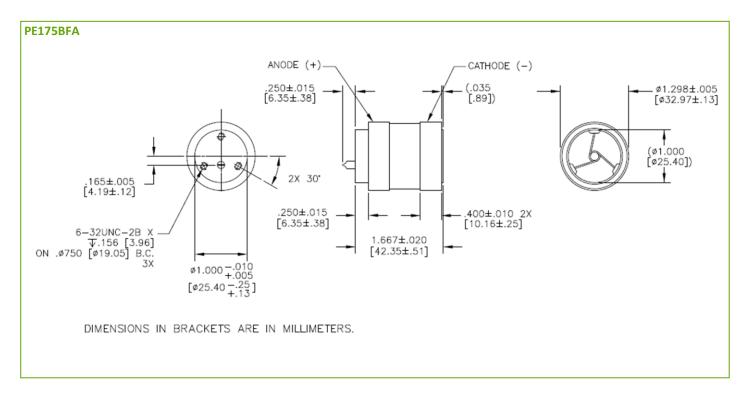

www.excelitas.com PE175BFA 03/2012 page 3 of 4

Spectral Output

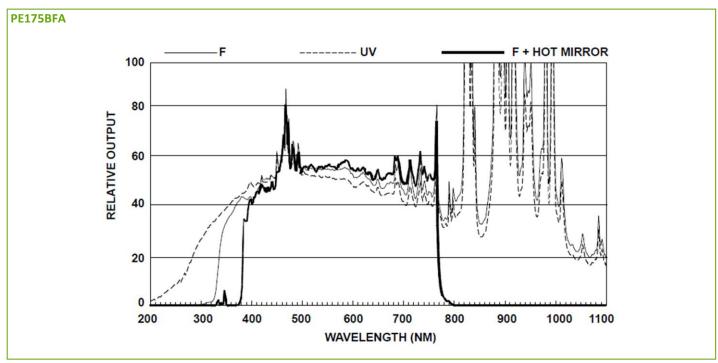

Cermax® Lampen können Sie online hier in Lab-Club kaufen - oder offline unter www.msscientific.de

About Excelitas Technologies

Excelitas Technologies is a global technology leader focused on delivering innovative, customized solutions to meet the lighting, detection and other high-performance technology needs of OEM customers.

From medical lighting to analytical instrumentation, clinical diagnostics, industrial, safety and security, and aerospace and defense applications, Excelitas Technologies is committed to enabling our customers' success in their specialty end-markets. Excelitas Technologies has approximately 3,000 employees in North America, Europe and Asia, serving customers across the world.

Excelitas Technologies Illumination, Inc. 44370 Christy Street Fremont, California 94538-3180 USA

Telephone: (+1) 510.979.6500 Toll-free: (+1) 800.775.6786 Fax: (+1) 510.687.1140 shortarcxenon.na@excelitas.com

www.excelitas.com

Excelitas Technologies Singapore, Private Limited.

shortarcxenon.asia@excelitas.com

47 Ayer Rajah Crescent #06-12 Singapore 139947 Telephone: (+65) 6775 2022 (Main Line) Telephone: (+65) 6770 4366 (Customer Service Hotline) Fax: (+65) 6778 1752 Excelitas Technologies GmbH & Co. KG Wenzel-Jaksch-Str. 31 D-65199 Wiesbaden Germany Telephone: (+49) 611 492 430

Fax: (+49) 611 492 165 shortarcxenon.europe@excelitas.com Japan
Excelitas Technologies

Cast Tower 4th Floor,
Otemachi First Square
1-5-1 Otemachi, Chiyoda-ku,
Tokyo 100-0004
Telephone: (+81) 3-5219-1228
Fax: (+81) 3-5219-1201

shortarcxenon.asia@excelitas.com

For a complete listing of our global offices, visit www.excelitas.com/locations

© 2012 Excelitas Technologies Corp. All rights reserved. The Excelitas logo and design are registered trademarks of Excelitas Technologies Corp. All other trademarks not owned by Excelitas Technologies or its subsidiaries that are depicted herein are the property of their respective owners. Excelitas reserves the right to change this document at any time without notice and disclaims liability for editorial, pictorial or typographical errors.

